

PARTS LIST:

- 1x Frame/Runner Assembly
- 1x Bin Bucket
- 1x Lid
- Bin Divider
- Door Mount Bracket Kit (for KRB15D only)
- 1x Instruction Sheet

Installation - KRB15

1. Position frame assembly 5mm from the door face and away from hinges.

2. Use four wood screws to fix bin frame to cabinet.

Note: If top mounting, use a 10-20mm spacer to allow for the lid and slider handle assembly to run freely.

Installation - KRB15D

1. Fit door brackets to slider assembly. Note which is LH/RH. Pull slider out to expose screw holes. Position bracket on slider and secure with M5x10 mushroom head screws provided with star washer on front slot.

2. Position the bin flush and square with the door face to ensure door closes correctly.

Note: If top mounting, use a 10-20mm spacer to allow for the lid and slider handle assembly to run freely.

3. Use wood screws to fix bin to door and frame to cabinet.

Note: There is a small amount of adjustment in the door mount bracket to correct vertical alignment of the door if necessary.

- To remove lid, depress one side at a time and lift out.
- To remove slider, locate clip on side of runner, depress and pull out.
- Use the removable divider to separate general waste from recyclables.
- Use large size liners with your bin. To fit bags, lift bin out of frame and tuck excess bag down around the sides and drop bin back into base. Use bin liner clamp on divider to secure your bag.

Caring For Your Kimberley Waste Bin

1. Please make sure you thoroughly read and understand the installation instructions and follow them carefully.
2. For best results and longevity, always use a bin liner inside your waste bin.
3. Always make sure the liner is fitted without obstructing any of the waste bins moving parts.
4. Do not overload your waste bin.
5. Do not force rubbish down to compact your waste.
6. Do not place heavy items on top of the bin lid.
7. Never try to close your waste bin with your feet.
8. Never force the waste bin closed.
9. Clean the interior and exterior of the waste bin regularly using a soft cloth and warm mild soapy water. Do not use harsh detergents.
10. Use a soft cloth to dry the waste bin after washing.
11. Thoroughly dry metal components to avoid rust and damage.
12. Do not use the bin outside or expose to the weather.
13. Do not place waste bin near a heater or hot device.

