



4

Pull each side of the inner runner out as shown. Place assembly frame runner cover over runners.

Once both are in place gently push bin frame back until you hear it click in place.

Move bin frame in and out to ensure the runners have a smooth movement. If the movement isn't as desired then adjust before proceeding to the next step.

5


Once you are satisfied with the runner movement, tighten all screws as shown.


Note: At this point fit the lid between the support brackets (Shown step 3).



6

Check and mark the height of the screw positions in the inner cupboard door, as shown (figure B). Use a 10 mm drill bit and drill 10mm deep.

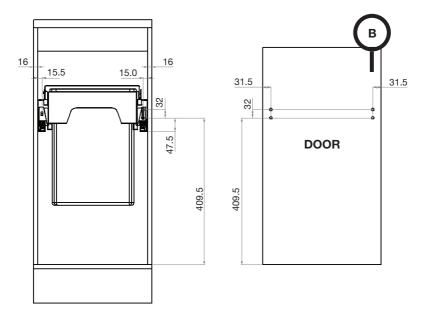

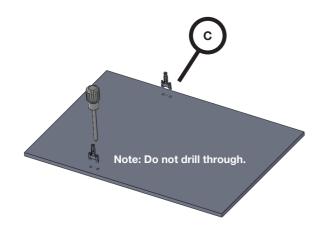

7

Insert front fixing brackets as shown (figure C). Use a Phillips screw driver to secure fixing bracket to door.



Align and fit the two fixing brackets to the runner slots. Once in place, push door and runners back inside the cabinet until you hear the runners click in place.

For further adjustments refer to smooth runner instruction sheet.



