


Waste Bin Soft Close System

If you find your Waste Bin is not closing all the way, please follow these steps;

1. Remove Lid from your bin. (Please see Instructions)
2. Open your bin, by pulling it forward to the maximum opening.
3. Once your bin is fully extended open. At the rear of the frame either side, ensure the runner is in the correct position. (Refer to images below)



INCORRECT POSITION

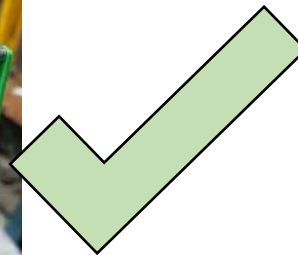

CORRECT POSITION

4. In the event your bin runner is in the incorrect position. While the bin is in the open position, slide the clear tab forwards into the correct position.



CLEAR TAB -Slide to correct position.
Please refer to the correct position in image above.